



Sony CFD-8 Antenna Replacement

This guide provides the steps to remove and replace the antenna for the Sony CFD-8 Boombox.

Written By: Tess



INTRODUCTION

Use this guide if your radio is not working and the antenna needs to be replaced. This is an easy part to replace and requires a standard Phillips #1 screwdriver.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Antenna



- Unscrew the screw attaching the antenna to the boombox with a Phillips #1 screwdriver.
- ❗ Once unscrewed, the antenna can be removed from the boombox by lifting it up and out of the hole.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-12 03:08:53 PM.